Overview

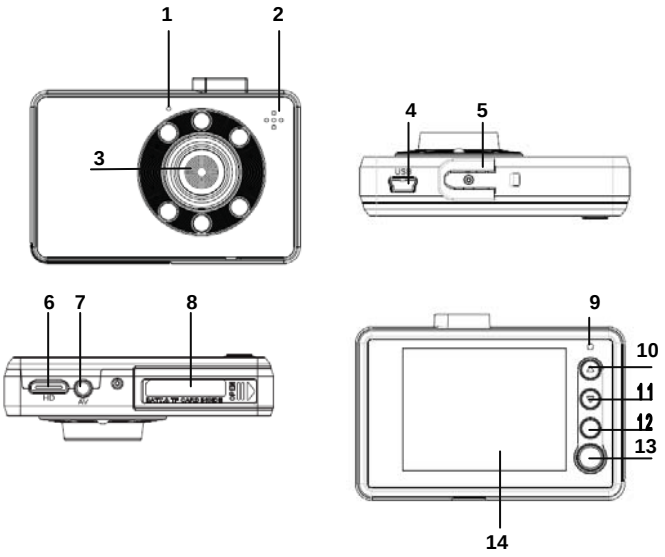

1. Microphone
2. Speaker
3. Lens
4. USB Slot
5. T-buckle Slot
6. HDMI Slot
7. AV Slot
8. Battery door / SD Card Slot
9. LED Light
10. Up Button
11. Down Button
12. Mode / Menu Button
13. Power / SOS Button
14. LCD Screen

System Requirements

To download photos and videos to your PC, you need the following minimum configuration:

- Pentium 4 Processor (or above), 2.6GHz, with Windows XP, 7 Service Pack 2 and 8.
- 1GB RAM or higher. 200MB free disk space
- Available USB Interface
- CD-ROM
- Recommended screen resolution 1024 X 768 pixels or higher

GETTING STARTED

Installing the battery

1. Slide the battery door at the bottom of the DVR camcorder to open it.
2. Insert the Lithium battery with the right polarity facing up.
3. Close the battery door.

	Full battery, LED light indicator will disappear
	Medium battery
	Low battery

Insert a SD memory Card

1. The Micro SD card slot is located in the battery compartment**.**
2. Insert the Micro SD memory card in the correct position.
3. Press the memory card until you hear a “Click” sound.

NOTE

1. If you are not using the DVR, we recommend you remove the battery when not in use.
2. There is no internal memory; you need to insert a SD card before you use it.
3. For the SD card, you need to use 4GB Class 6 or higher.

Mounting bracket

Insert the mounting bracket into T buckle slot on the DVR, and attach the bracket suction cup to the windshield in the location you want it to be.

1. Insert the mounting bracket T buckle into the DVR (pg. 1 #5). Then close the suction cup clip to connect it firmly to the windshield.

2. To remove the mounting bracket T buckle from the windshield, open the suction cup clip as shown below.

How to install the DVR

Connect one end of the cable to the cigarette lighter and the other end to the DVR.

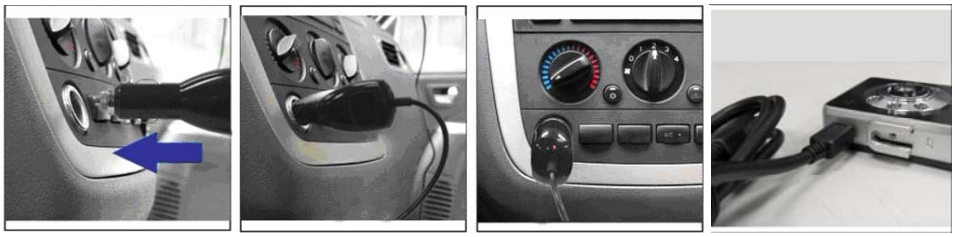

Starting the DVR

1. After the DVR is connected to the cigarette lighter, it will start to record automatically in video mode when the car starts.
2. The elapse time will appear on the top right of the LCD screen and the icon ● will flash on the LCD screen, the IR indicator on the right will flash.
3. Press the Power/SOS for two seconds to stop the recording.
4. Press Menu/Mode button switch to the ► /playback function and use the Up/Down button to preview the videos you record.

How to use record / take photos

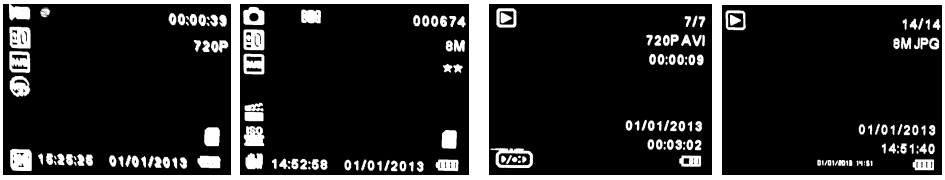

Video Mode **Camera Mode** **Playback Mode for Videos** **Playback Mode for Photos**

1. Press the Mode/ Menu button to enter the video, camera, playback mode.
2. Press the Power/SOS button to take videos or photos.
3. Press the Power/SOS button for two seconds to stop the recording.
4. Press Mode/Menu Button for playback mode to review the photos and videos you have captured and recorded.
5. Press the Up/Down button to select the photo/video files.
6. In video mode, you can press the Power/SOS button to turn on the SOS function as it will keep the file from being overwritten. This function is primarily used in emergency situations.

NOTE

1. For outside use, hold the DVR with both hands and position a subject in the center of the frame to focus on.
2. You should also turn off the loop recording using the mode function to keep file videos from being overwritten.

Menu button

1. Press Mode / Menu button to select Video /camera/ playback mode.
2. Press Mode /Menu button for three seconds to enter function menu, press Mode / Menu button again for three seconds to enter the setup menu.
3. Press Down/Up button to select the function and press the Mode/ menu button to confirm and to exit.

Video Mode Function Menu

Video Mode Setup Menu

Camera Mode Function Menu

Camera Mode Setup Menu

Download files

Connect the DVR to a computer with a USB when the DVR is on and you can download files from the SD card.